

# Healix Enterprises Operating Guidelines for the **E-Zcut II™ Pineapple Auto-Cut™ Machine**

Attention: Use only 120VAC, clean-dry compressed air at 75-80PSI and 15-20CFM

*Remember: Nothing replaces common sense, ensure a safe working environment when operating any type of cutting equipment.*

The Cutting Blades are Very Sharp! Always use caution when cleaning, removing debris, adjusting, or operating this machine. **Never load pineapples with your hands!**

1. Never adjust or service this machine while air or power is connected!
2. When powering on. The horn will sound and the machine will cycle once. If all systems are ok the horn will stop and the machine is ready.
3. **Always use the pineapple pushing device to load pineapples into the Machine. Never load pineapples with your hands!**
4. If machine jams, push the red emergence stop (E-Stop) button. The machine will stop and dump all air pressure. Then unplug air and power before removing jam.
5. If your machine has a conveyor system and the conveyor jams, push the red emergence stop (E-Stop) button, **unplug air and power**, only then attempt to remove jam.
6. **Never reach around clear plexy guards when machine air or power is connected.**
7. Always clean and sanitize to local health code standards before and after use. (Cleaning before is necessary if machine is not stored in a high level sanitized area.)

#### Sanitation Assurance™ (SA)

- All materials intended for direct food contact are NSF accepted or FDA certified
- Materials Safety Data Sheets Available: [www.pineappleking.com](http://www.pineappleking.com)

# HEALIX

## Design and Manufacturing

Visit Us On the Web: [www.pineappleking.com](http://www.pineappleking.com)

Call Us: Phone/Fax: 812-282-9869